


COAX FROM Tx

 
COAX TO ANTENNA

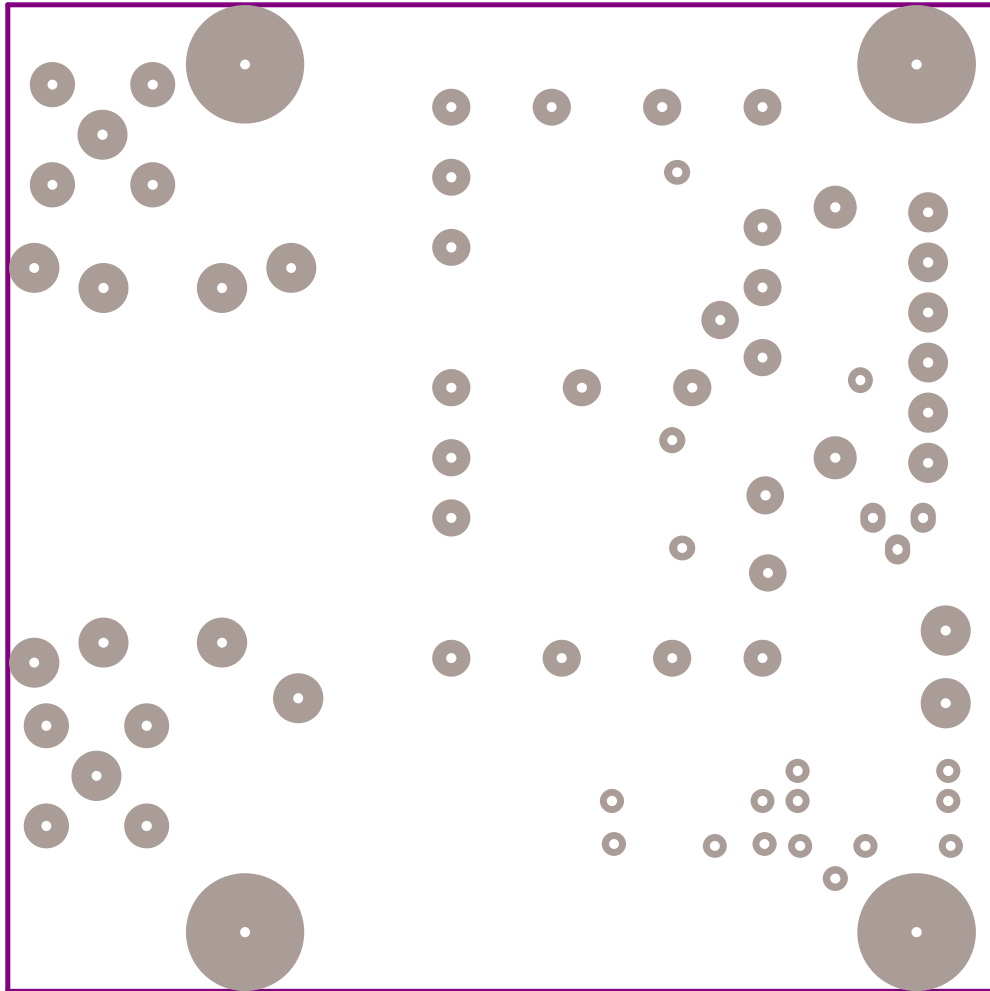

NOT USED
NOT USED
12V IN
Vforward
Vreverse
GND

TO CONTROL PCB

— GND



RF SNIFFER TO CONTROL BOARD, USE CO-AX